


DIN0123

Martin oak extension table

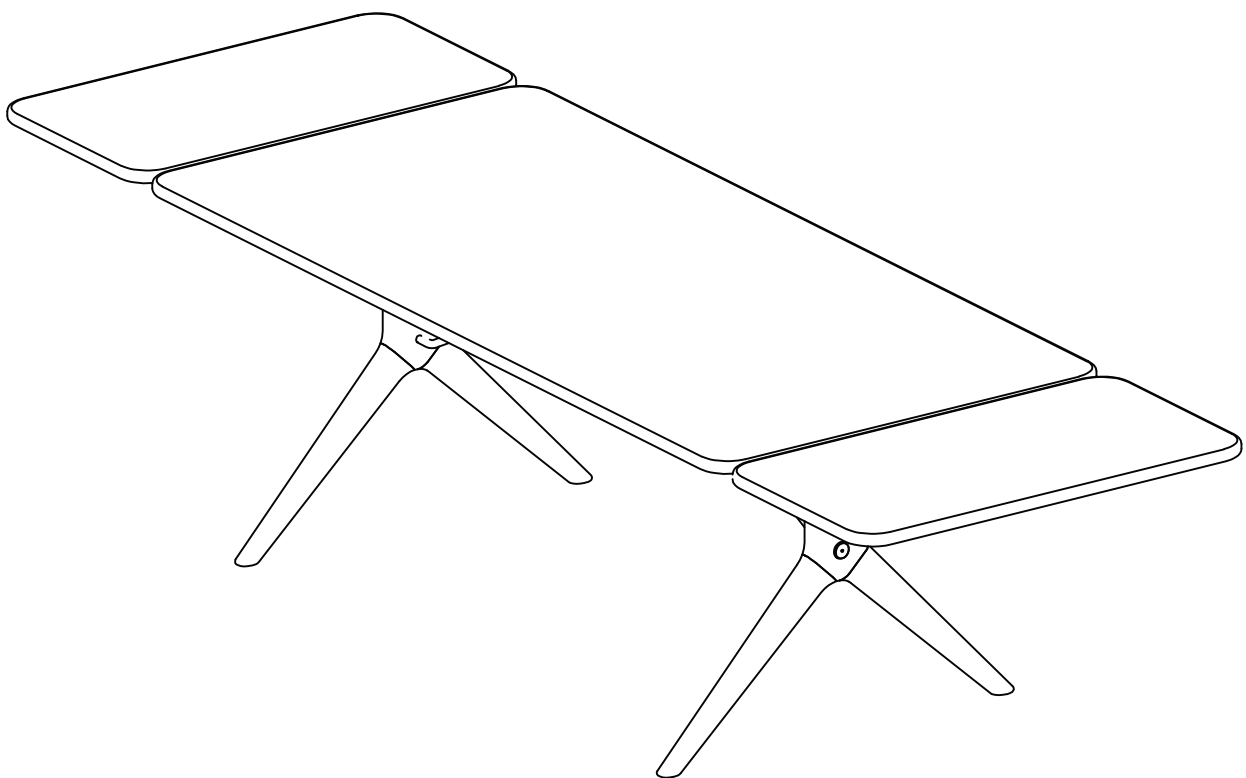






(FR) Notice de Montage -
Utilisation - Entretien

(IT) Istruzioni per il Montaggio,
l'Uso e la Manutenzione

(DE) Montage - Verwendung -
Wartungshandbuch

(ES) Instrucciones de Montaje,
Utilización y Mantenimiento


(EN) Assembly - Use -
Maintenance Manual

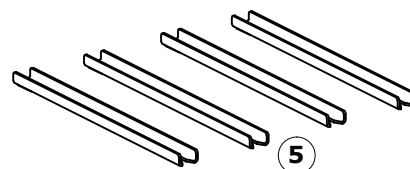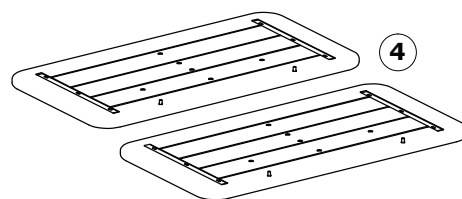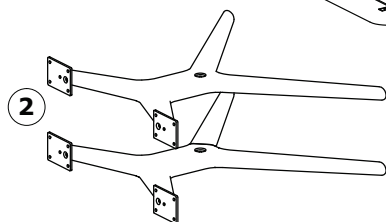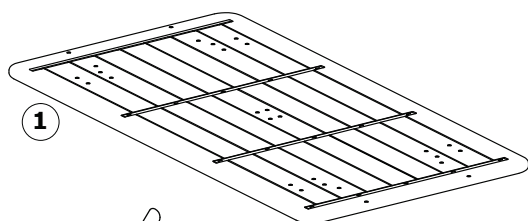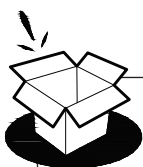

A x20




B x20

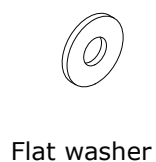

C x20



 D x2





E x4



F x2



G x12

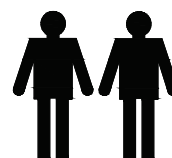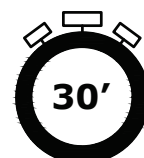

NOT INCLUDED
NON FOURNIS



A x16




B x16



C x16



F x2

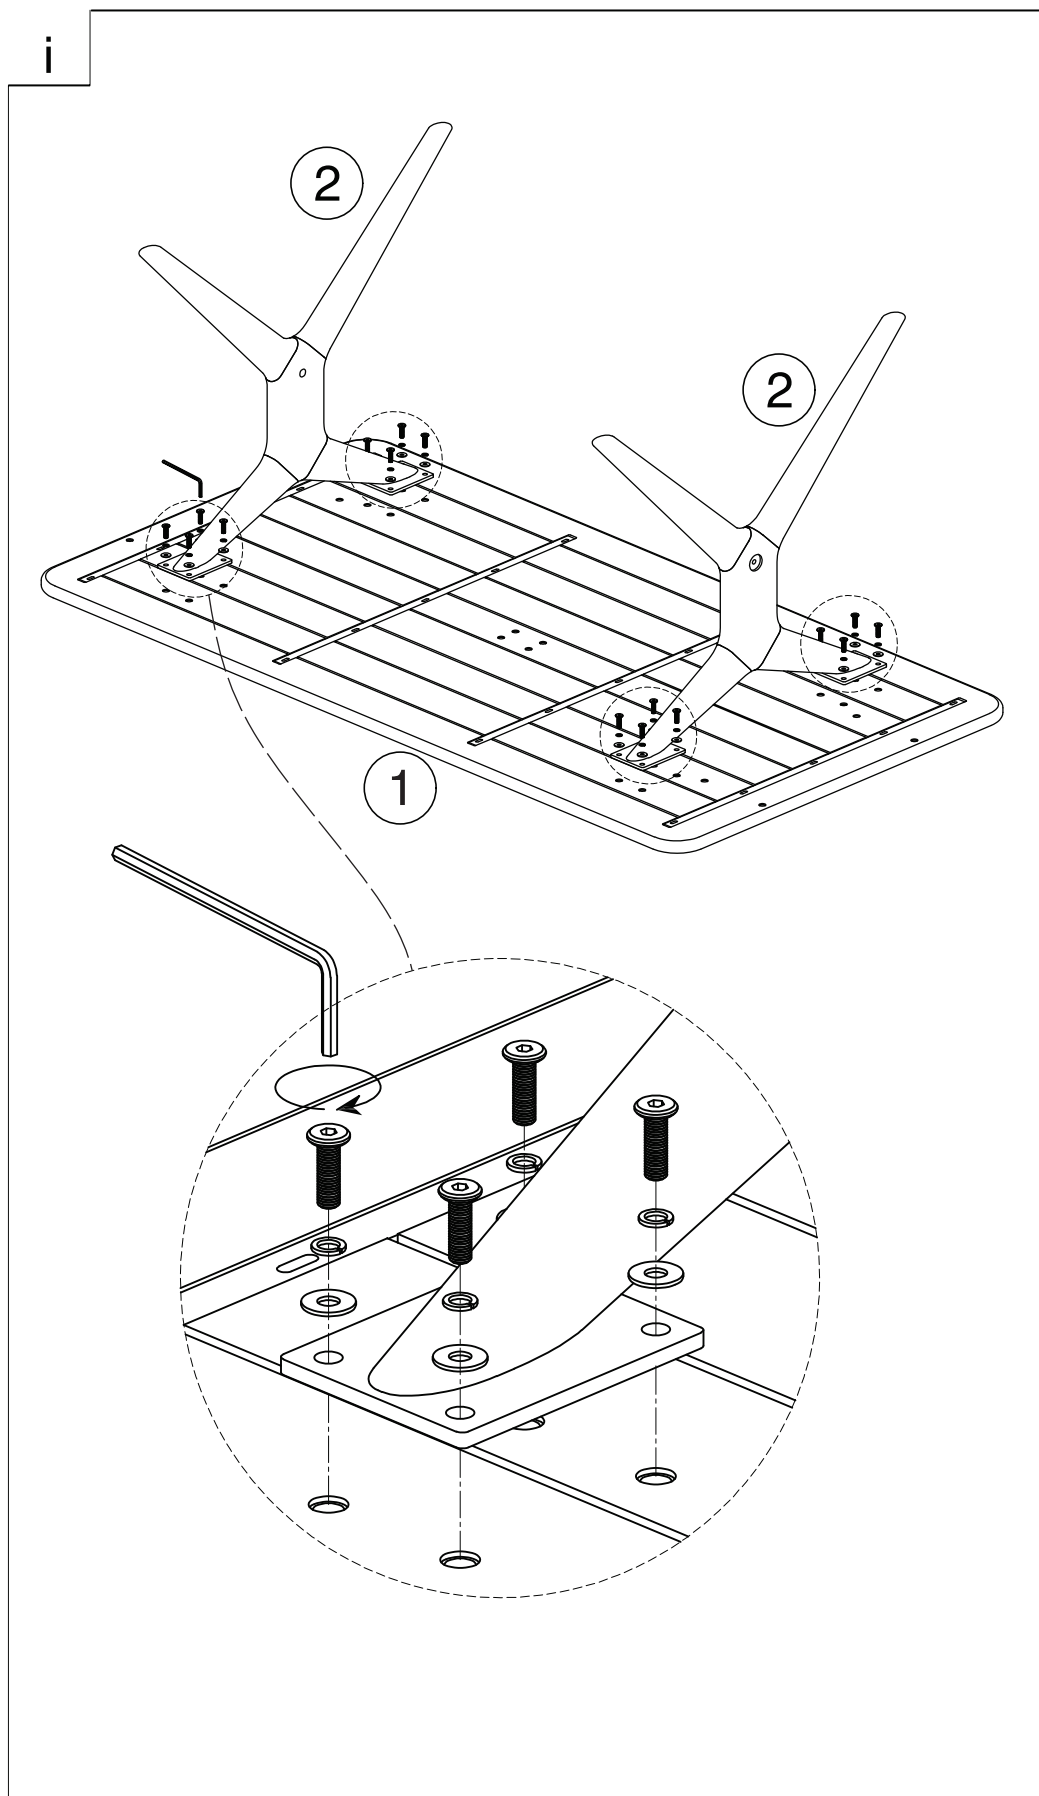




A x4



B x4



 C x4



D x2


 






E x4



F x2



ii

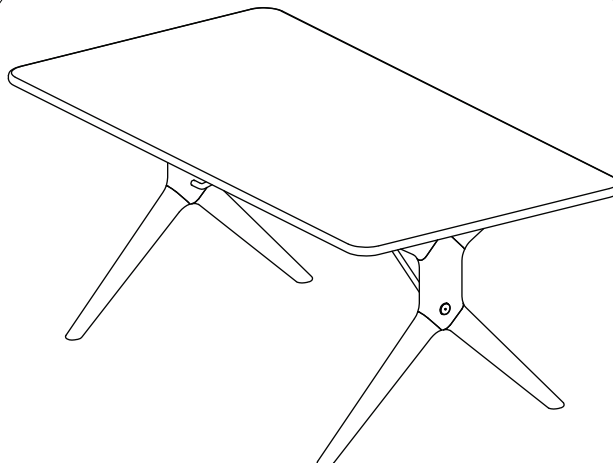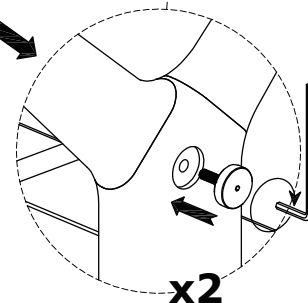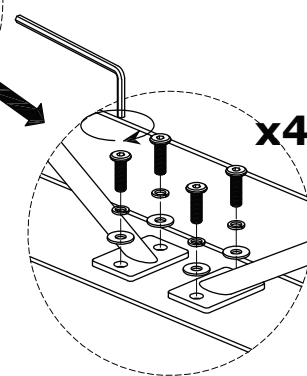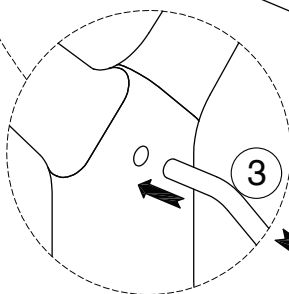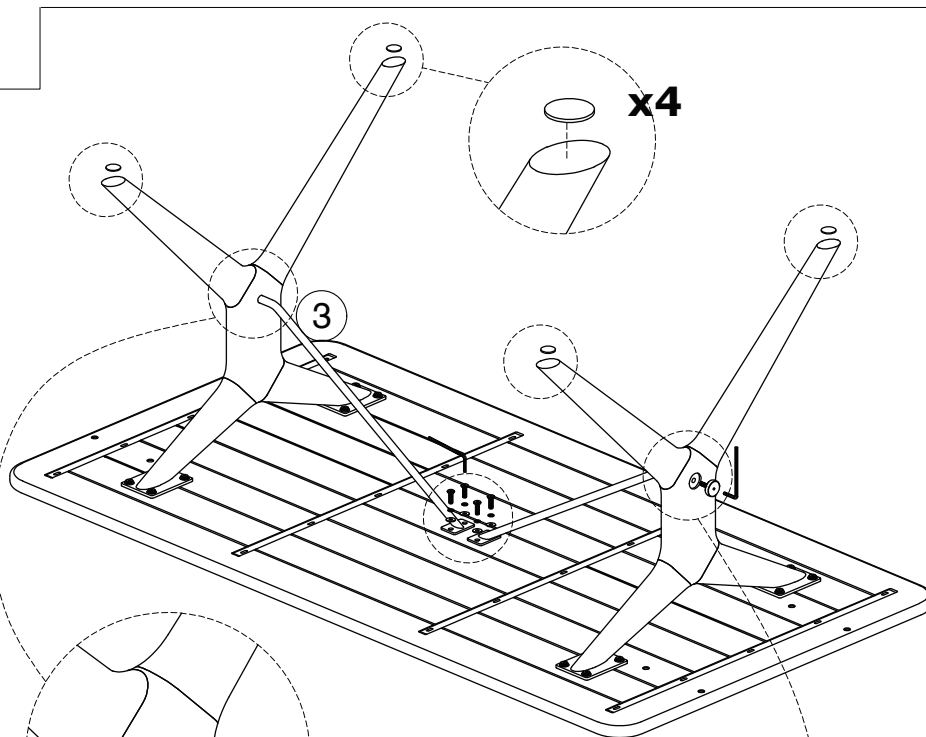




Ⓔ x8

iii

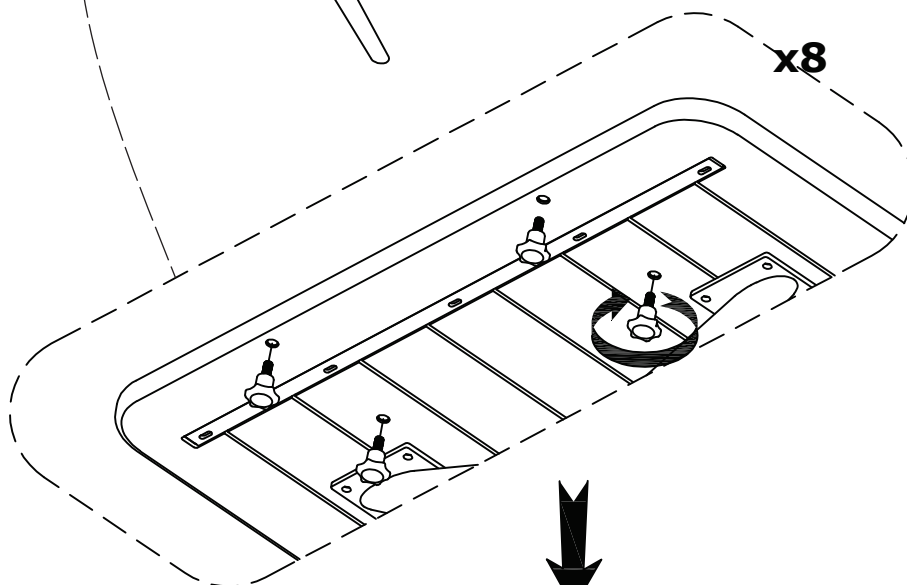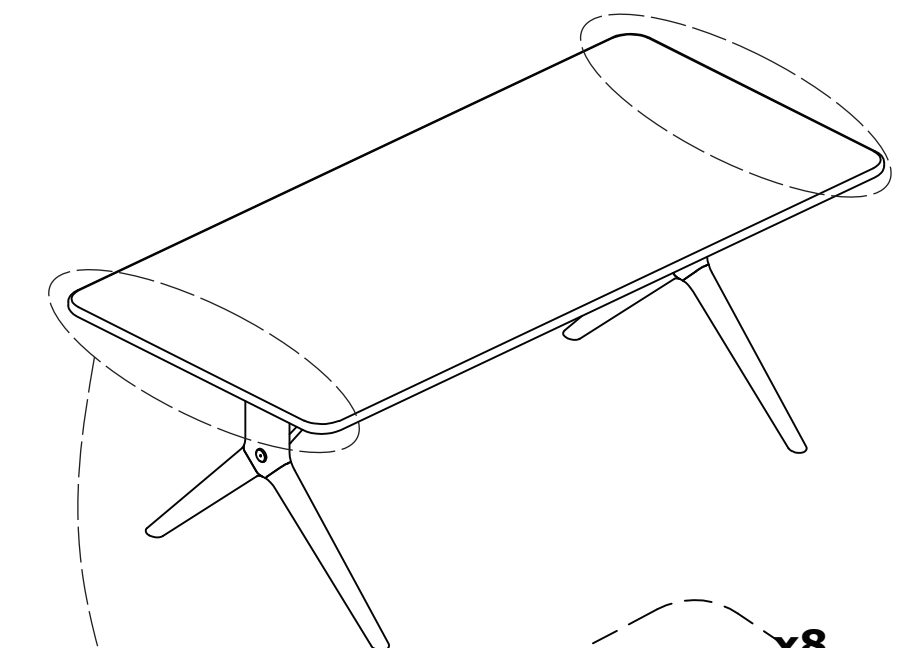


(5mm)

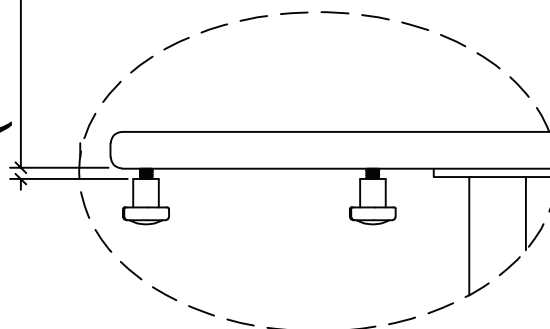




G x4


iv

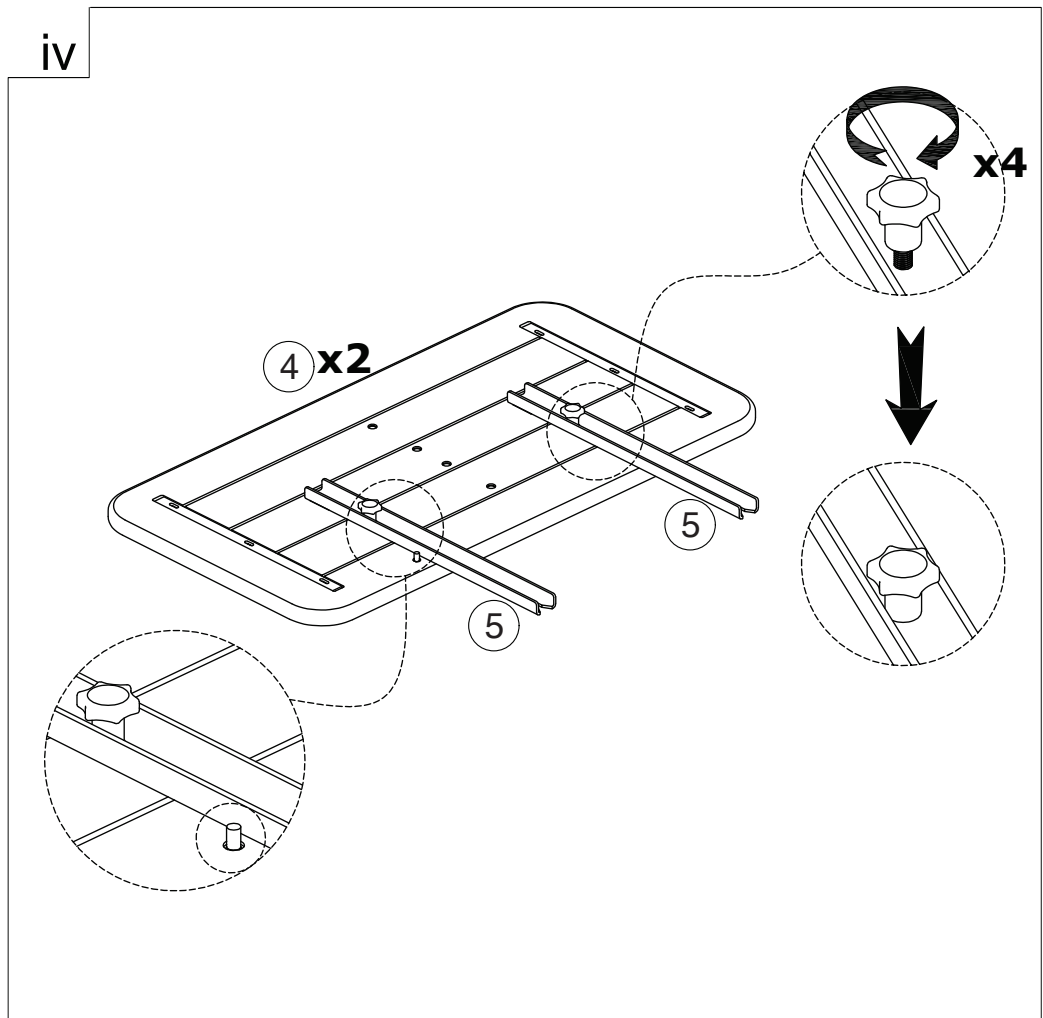

v

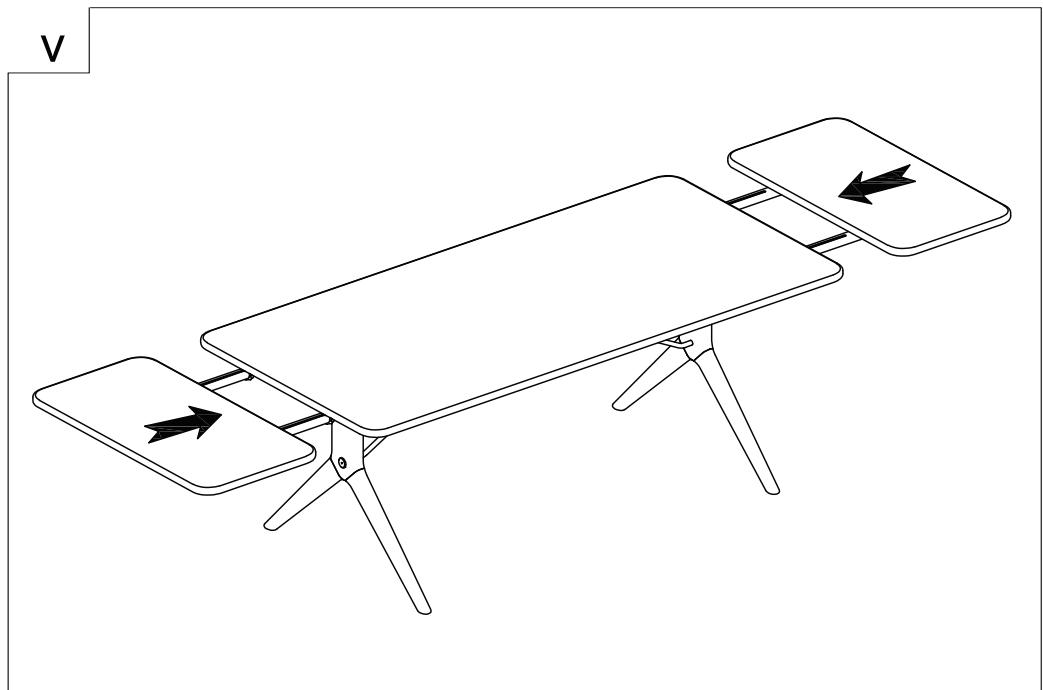


vi

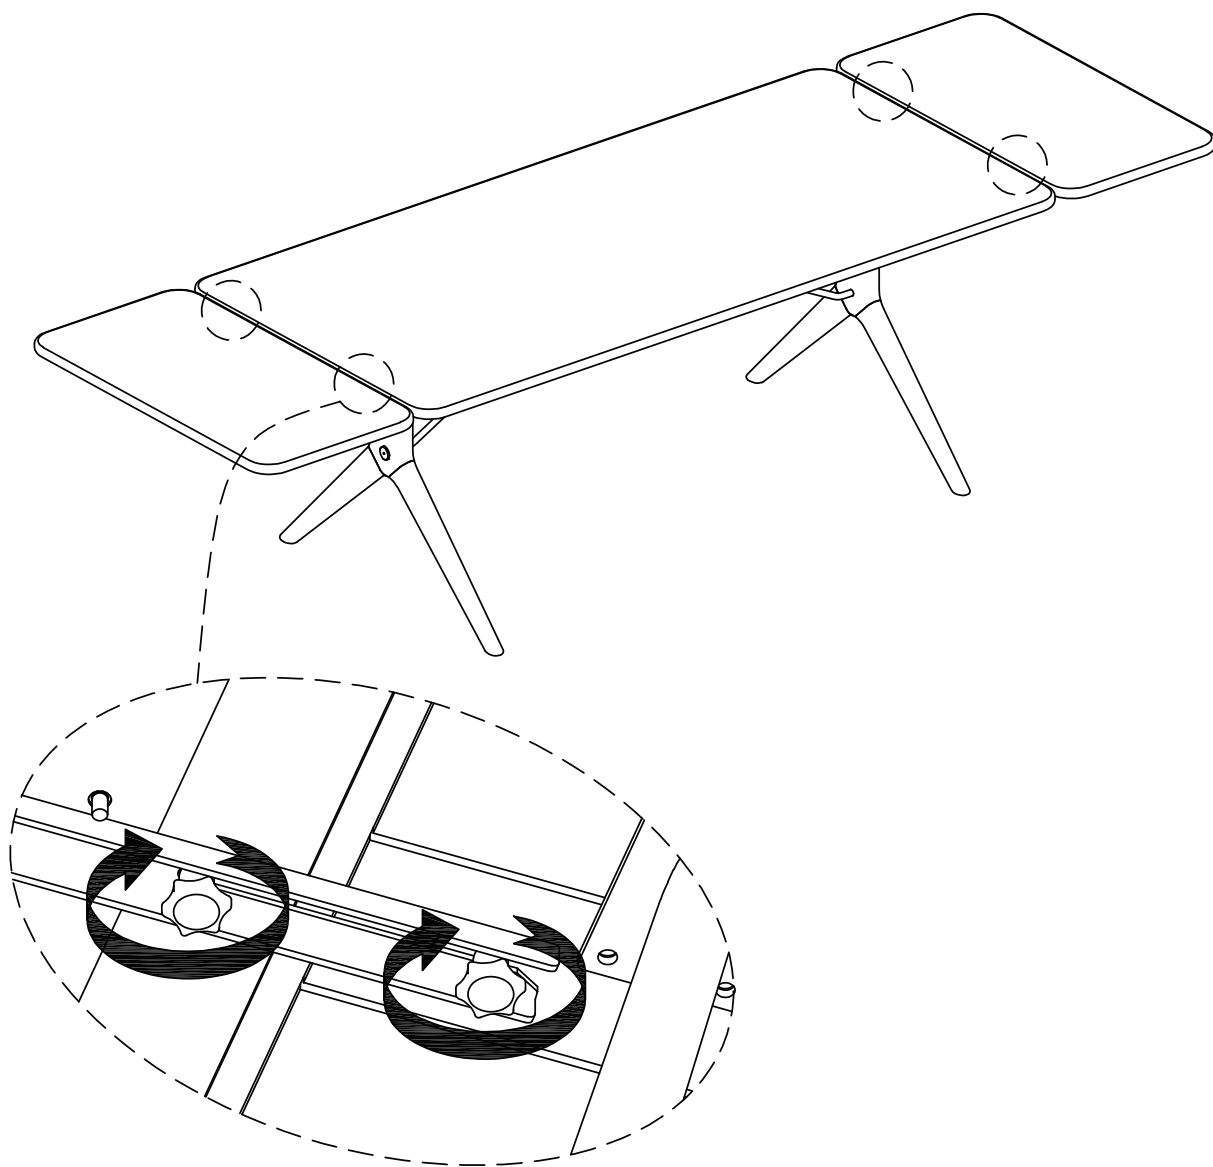

vii

Remove the table leaves when not in use.

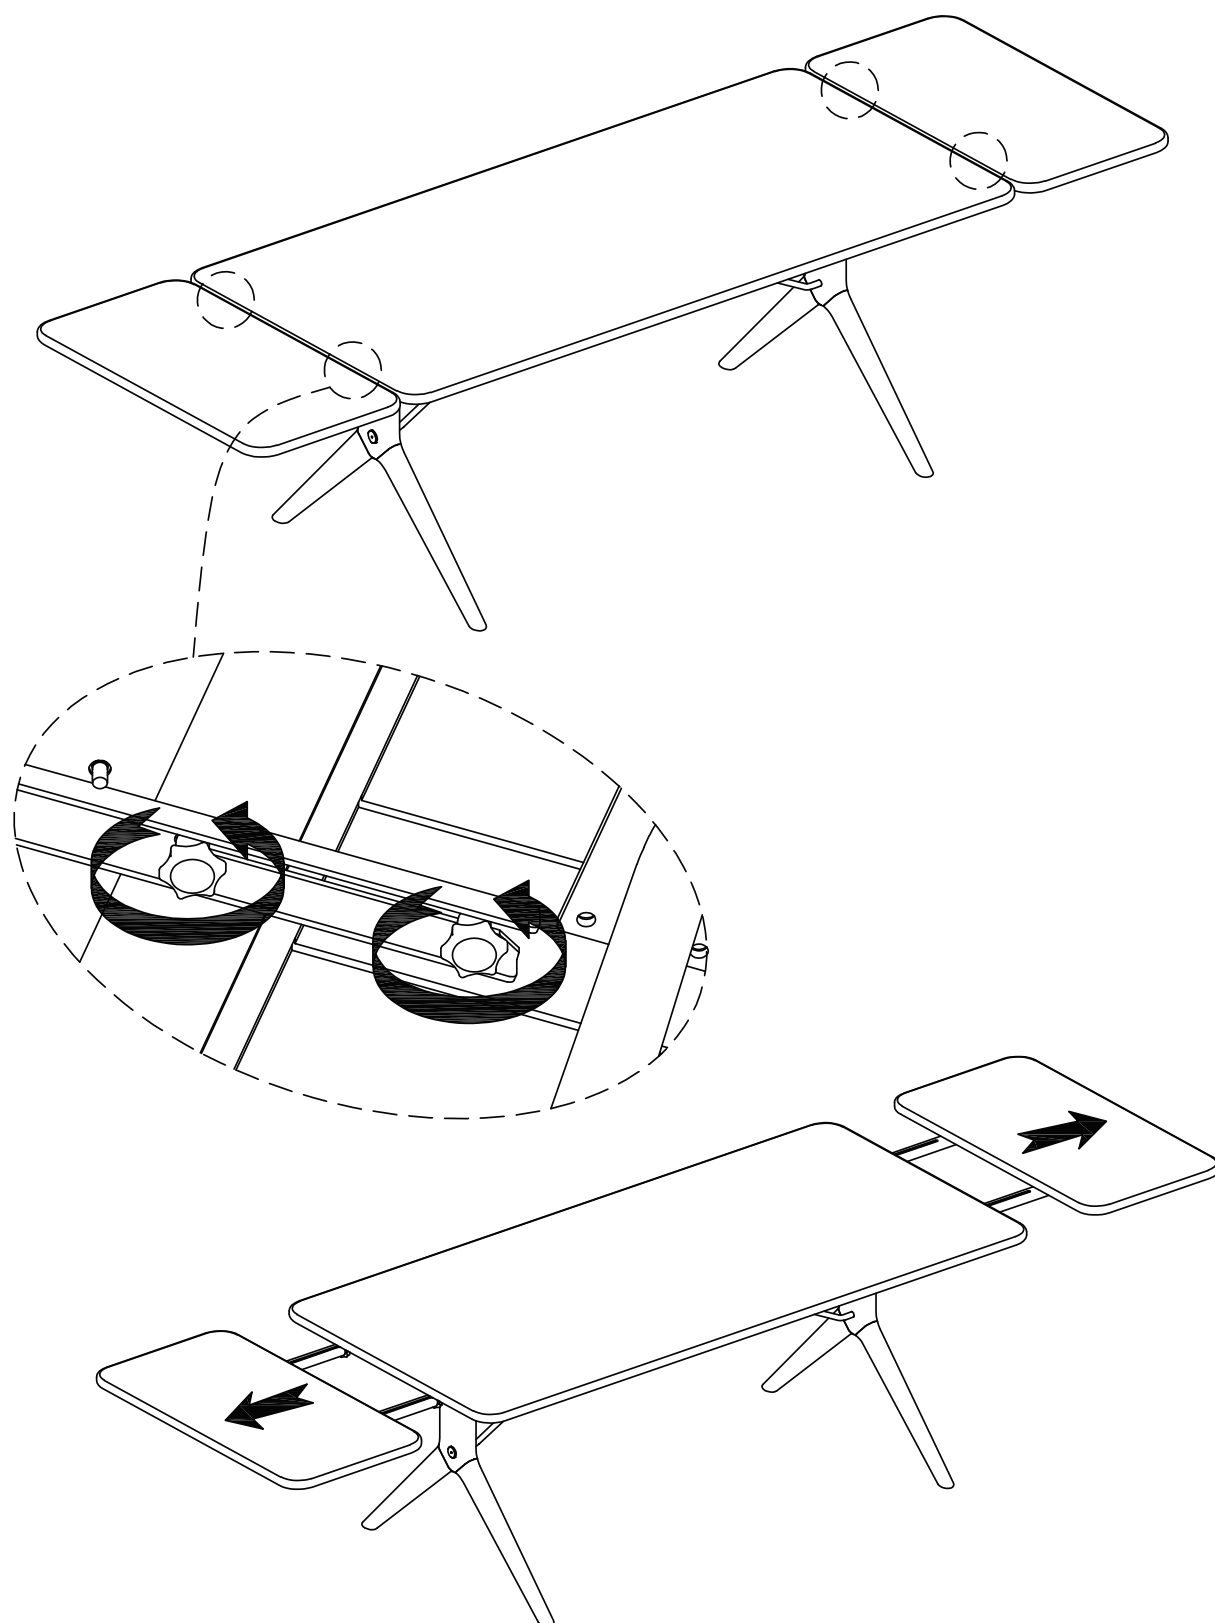

viii

